# Fittings and Tubing

# **QS Series**

### **Medium Pressure**

Pressures to 15,000 psi (1034 bar)

Since 1945 Parker Autoclave Engineers has designed and built premium quality valves, fittings and tubing. This commitment to engineering and manufacturing excellence has earned Parker Autoclave Engineers a reputation for reliable, efficient product performance. Parker Autoclave Engineers has long been established as the world leader in high pressure fluid handling components for the chemical/petrochemical, research, and oil and gas industries.



# **QS Medium Pressure Fittings and Tubing:**

- Available sizes are 1/4, 3/8, 9/16, 3/4 and 1".
- Fittings and tubing manufactured from high strength stainless steel.
- Molybdenum disulfide-coated gland nuts to prevent galling.
- Gland nut positioning mark for assembly.
- Single-ferrule compression sleeve.
- Connection weep holes for safety and leak detection.
- Fast easy make-up of connection.
- Operating Temperatures from 0°F (-17.8°C) to 650°F (343°C).
- 1" QS fitting bodies are 2507 Super Duplex standard.

The Medium Pressure QS Series uses Parker Autoclave Engineers' Quick Set compression sleeve design. This single-ferrule compression sleeve connection delivers fast, easy make-up and reliable bubble-tight performance in liquid or gas service.





# Frings and Tubing - QS Series


# **Pressures to 15,000 psi (1034 bar)**

Parker Autoclave Engineers Medium Pressure QS Fittings are designed for use with QS Series valves and medium pressure tubing. These fittings feature improved compression connections with larger orifices for excellent flow capabilities. Parker Autoclave Engineers fittings and components are manufactured of high strength stainless steel.




# Connection Components |


All Parker Autoclave Engineers valves and fittings are supplied complete with appropriate glands and sleeves. To order these components separately, use order numbers listed. When using plug, sleeve is not required.



**Gland** QSG()



Sleeve QSS ( )



Plug QSP()

Add tube size ( )

1/4" - 40

3/8" - 60

9/16" - 90

3/4" - 120

1" - 160

Example:

1/4" Gland - QSG 40

To ensure proper fit use Parker Autoclave Engineers tubing. For mounting hole option add suffix PM to catalog number. Consult factory for mounting hole dimensions.

Catalog Connection Outside		Outside	Pressure	Minimum		[	Dimensio		Block	Fitting			
Number		Diameter Tube	Rating psi (bar)*	Opening	Α	В	С	D Typical	Е	F	G Thickness	Thickness	Pattern

### **Elbow**


QSL4400	QS250	1/4	15,000	0.16	1.38	2.00	0.52	0.63	1.00	1.00	0.75	
		(6.35)	(1034.20)	(3.99)	(34.93)	(50.80)	(13.23)	(15.88)	(25.40)	(25.40)	(19.05)	
QSL6600	QS375	3/8	15,000	0.25	1.50	2.00	0.55	0.75	1.00	1.00	0.81	
		(9.53)	(1034.20)	(6.35)	(38.10)	(50.80)	(14.00)	(19.05)	(25.40)	(25.40)	(20.62)	
QSL9900	QS562	9/16	15,000	0.36	2.19	3.00	0.82	1.19	1.50	1.50	1.25	See
		(14.29)	(1034.20)	(9.12)	(55.58)	(76.20)	(20.83)	(30.18)	(38.10)	(38.10)	(31.75)	Figure 1
QSL12	QS750	3/4	15,000	0.52	2.94	4.13	1.04	1.50	2.06	2.06	1.50	riguio i
		(19.05)	(1034.20)	(13.11)	(74.63)	(104.78)	(26.37)	(38.10)	(52.40)	(52.40)	(38.10)	
QSL16	QSF1000	1	15,000	0.688	3.5	4.75	1.19	1.75	2.38	2.38	2.00	
		(25.4)	(1034.20)	(17.48)	(88.90)	(120.65)	(30.18)	(44.45)	(60.33)	(60.33)	(50.80)	

<sup>\*</sup>Maximum pressure rating is based on the lowest rating of any component.

Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change. For prompt service, Parker Autoclave Engineers stocks select products. Consult your local representative.

1" QS fitting bodies are 2507 Super Duplex

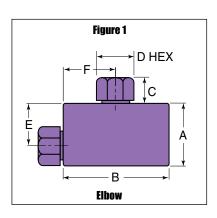



For mounting hole option add suffix PM to catalog number. Consult factory for mounting hole dimensions.

Catalog	Connection	Outside	Pressure	Minimum		Dimensions - inches (mm)							Fitting
Number	Туре	Diameter Tube	Rating psi (bar)*	Opening	А	В	С	D Typical	Е	F	G Thickness	Thickness	Pattern
Tee													
QST4440	QS250	1/4 (6.35)	15,000 <b>(1034.20)</b>	0.16 <b>(3.99)</b>	1.38 ( <b>34.93</b> )	2.00 ( <b>50.80</b> )	0.52 (13.23)	0.63 (15.88)	1.00 <b>(25.40)</b>	1.00 <b>(25.40)</b>		0.75 ( <b>19.05</b> )	
QST6660	QS375	3/8 (9.53)	15,000 <b>(1034.20)</b>	0.25 ( <b>6.35</b> )	1.50 ( <b>38.10</b> )	2.00 ( <b>50.80</b> )	0.55 (14.00)	0.75 (19.05)	1.00 <b>(25.40)</b>	1.00 <b>(25.40)</b>		0.81 (20.62)	See Figure 2
QST9990	QS562	9/16 ( <b>14.29</b> )	15,000 <b>(1034.20)</b>	0.36 ( <b>9.12</b> )	2.19 <b>(55.58)</b>	3.00 ( <b>76.20</b> )	0.82 ( <b>20.83</b> )	1.19 ( <b>30.18</b> )	1.50 ( <b>38.10</b> )	1.50 (38.10)		1.25 ( <b>31.75</b> )	
QST12	QS750	3/4 (19.05)	15,000 ( <b>1034.20</b> )	0.52 ( <b>13.11</b> )	2.94 ( <b>74.63</b> )	4.13 ( <b>104.78</b> )	1.04 ( <b>26.37</b> )	1.50 (38.10)	2.06 ( <b>52.40</b> )	2.06 <b>(52.40)</b>		1.50 ( <b>38.10</b> )	
QST16	QSF1000	1 (25.4)	15,000 <b>(1034.20)</b>	0.688 (17.48)	3.50 (88.90)	4.75 <b>(120.65)</b>	1.19 ( <b>30.18</b> )	1.75 ( <b>44.45</b> )	2.38 ( <b>60.33</b> )	2.38 ( <b>60.33</b> )		2.00 ( <b>50.80</b> )	
Cross	•												
QSX4444	QS250	1/4 <b>(6.35)</b>	15,000 <b>(1034.20)</b>	0.16 <b>(3.99)</b>	2.00 ( <b>50.80</b> )	2.00 <b>(50.80)</b>	0.52 (13.23)	0.63 (15.88)	1.00 <b>(25.40)</b>	1.00 <b>(25.40)</b>		0.75 (19.05)	
QSX6666	QS375	3/8 (9.53)	15,000 ( <b>1034.20</b> )	0.25 ( <b>6.35</b> )	2.00 ( <b>50.80</b> )	2.00 ( <b>50.80</b> )	0.55 (14.00)	0.75 (19.05)	1.00 ( <b>25.40</b> )	1.00 ( <b>25.40</b> )		0.81 ( <b>20.62</b> )	
QSX9999	QS562	9/16 ( <b>14.29</b> )	15,000 <b>(1034.20)</b>	0.36 ( <b>9.12</b> )	3.00 ( <b>76.20</b> )	3.00 ( <b>76.20</b> )	0.82 ( <b>20.83</b> )	1.19 ( <b>30.18</b> )	1.50 ( <b>38.10</b> )	1.50 ( <b>38.10</b> )		1.25 ( <b>31.75</b> )	See Figure 3
QSX12	QS750	3/4 (19.05)	15,000 <b>(1034.20)</b>	0.52 ( <b>13.11</b> )	4.13 ( <b>104.78</b> )	4.13 ( <b>104.78</b> )	1.04 ( <b>26.37</b> )	1.50 (38.10)	2.06 ( <b>52.40</b> )	2.06 <b>(52.40)</b>		1.50 ( <b>38.10</b> )	riguic o
QSX16	QSF1000	1 (25.4)	15,000 ( <b>1034.20</b> )	0.688 (17.48)	4.75 ( <b>120.65</b> )	4.75	1.19 ( <b>30.18</b> )	1.75 (44.45)	2.38 ( <b>60.33</b> )	2.38 ( <b>60.33</b> )		2.00 ( <b>50.80</b> )	

For mounting hole option add suffix PM to catalog number. Consult factory for mounting hole dimensions.

<sup>1&</sup>quot; QS fitting bodies are 2507 Super Duplex

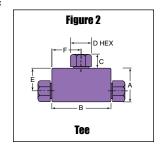

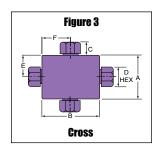

Catalog	Connection	Outside	Pressure	Minimum			)imensio	ns - incl	nes (mm	)		Block	Fitting
Number	Type	Diameter Tube	Rating psi (bar)*	Opening	А	В	С	D Typical	Е	F	G Thickness	Thickness	Pattern
traight	Coupling												
15F44QQ	QS250	1/4 <b>(6.35)</b>	15,000 <b>(1034.20)</b>	0.16 (3.99)	0.75 <b>(19.05)</b>	1.63 <b>(41.28)</b>	0.52 (13.23)	0.63 ( <b>15.88</b> )		Straight			
15F66QQ	QS375	3/8 (9.53)	15,000 ( <b>1034.20</b> )	0.25 ( <b>6.35</b> )	0.81 ( <b>20.65</b> )	1.75 ( <b>44.45</b> )	0.55 (14.00)	0.75 ( <b>19.05</b> )	Straight			See	
15F99QQ	QS562	9/16 ( <b>14.29</b> )	15,000 ( <b>1034.20</b> )	0.36 (9.12)	1.38 ( <b>34.93</b> )	2.75 ( <b>69.85</b> )	0.82 ( <b>20.83</b> )	1.19 ( <b>30.18</b> )	Straight			Figure 4	
15F12Q	QS750	3/4 (19.05)	15,000 ( <b>1034.20</b> )	0.52 (13.11)	1.50 (38.10)	3.75 (95.25)	1.04 (26.37)	1.50 (38.10)		Stra	aight		
15F16Q	QSF1000	1 (25.4)	15,000 <b>(1034.20)</b>	0.688 (17.48)	2.75 ( <b>69.85</b> )	4.50 (114.30)	1.19 ( <b>30.23</b> )	1.75 (44.45)		Stra	aight		
ulkhea	d Coupling												
15BF44QQ	QS250	1/4 <b>(6.35)</b>	15,000 <b>(1034.20)</b>	0.16 (3.99)	0.88 ( <b>22.23</b> )	2.00 ( <b>50.80</b> )	0.52 (13.23)	0.63 ( <b>15.88</b> )	0.63 ( <b>15.88</b> )	1.00 <b>(25.40)</b>	0.38 (9.53)		
5BF66QQ	QS375	3/8 (9.53)	15,000 ( <b>1034.20</b> )	0.25 ( <b>6.35</b> )	1.06 ( <b>27.00</b> )	2.38 ( <b>60.33</b> )	0.55 (14.00)	0.75 ( <b>19.05</b> )	0.79 ( <b>19.94</b> )	1.38 ( <b>34.93</b> )	0.38 ( <b>9.53</b> )		Coo
15BF99QQ	QS562	9/16	15,000	0.36	1.63	2.63	0.82	1.19	0.91	1.75	0.38		See

15BF12Q	QS750	3/4	15,000
		(19.05)	(1034.20)
15BF16Q	QSF1000	1	15,000

All dimensions for reference only and subject to change. For prompt service, Parker Autoclave Engineers stocks select products. Consult your local representative.

(60.33) (127.00)

(66.68)

3 50

(88.90)

(20.83)

1.04

(26.37)

1 19

(30.23)

(30.18)

1.50

(38.10)

1 75

(44.45)

(22.99)

1.50

(38.10)

(50.80)

(41.40)

1.88

**(47.63)** 2.38

(9.12)

0.52

(13.11) 0.688

(17.48)

Union Couplings are designed with a removable seat insert allowing disassembly and tubing removal without the necessity of loosening other items in a line.

(9.53)

0.38

(9.53)

(9.53)

(44.45)

2 13


(53.98) 1.88<sup>†</sup>

(47.63)

Figure 5


(14.29)

(25.4)

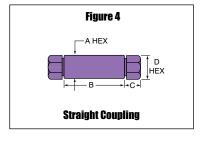

(1034.20)

(1034.20)

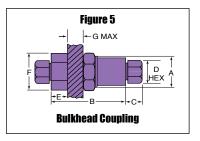

<sup>\*</sup>Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.

<sup>1&</sup>quot; QS fitting bodies are 2507 Super Duplex

<sup>†</sup> Distance across flats

# **Medium Pressure Tubing**

# **Pressures to 15,000 psi (1034 bar)**

Parker Autoclave Engineers offers a complete selection of austenetic, cold drawn stainless steel tubing designed to match the performance standards of Parker Autoclave Engineers valves and fittings. Parker Autoclave Engineers medium pressure tubing is manufactured specifically for high pressure applications requiring both strength and corrosion resistance. The tubing is furnished in random lengths between 20 feet (6 meters) and 26.5 feet (8.0 meters). The average is 24 feet (7.3 meters). Medium Pressure Tubing is available in five sizes and a variety of materials.



## **Inspection and Testing**

Parker Autoclave Engineer's medium pressure tubing is inspected to assure freedom from seams, laps, fissures or other flaws, as well as carburization or intergranular carbide precipitation. The outside and inside diameters of the tubing are subject to special inspection and are controlled within close tolerences to assure proper fit. Sample pieces of tube for each lot are tested to confirm mechanical properties. Hydrostatic testing is also performed on a statistical basis and is conducted at the working pressure of the tube. Parker Autoclave Engineers will perform 100% hydrostatic testing at additional cost if desired.

# **Special Materials**

In addition to the type 316/316L and 304/304L stainless steel tubing listed in this section, Parker Autoclave Engineers has limited stock of hard-to-obtain special tubing materials: Monel 400\*, Inconel 600\*, Inconel 625\*, Duplex, Super Duplex, Titanium Grade 2\*, Nickel 200\*, Hastelloy C276\* (\*Trademark names) Some are available in shorter lengths only. Please consult factory for stock availability.

### **Tubing Tolerance**

Nominal Tubing Size Tolerance/Outside Diameter inches (mm) inches (mm)

1/4 (6.35) .248/.243 (6.30/6.17)

3/8 (9.53) .370/.365 (9.40/9.27)

9/16 (14.27) .557/.552 (14.15/14.02)

3/4 (19.05) .745/.740 (18.92/18.80)

1 (25.4) .995/.990 (25.27/25.14)

Catalog	Tube	Fits	T	ube Size Inches (mm	1)	Flow		Workir	ng Pressure psi	i (bar)*
Number	Material	Connection Type	Outside Diameter	Inside Diameter	Wall Thickness	Area in.² (mm²)	-425 to 100°F -252 to 37.8°C	200°F 93°C	400°F 204°C	600°F 316°C
MS15-092**	316SS						20,000	20,000	19,250	18,050
WIO 10 032	01000	QS250	1/4	0.109	0.070	0.009	(1378.93)	(1378.93)	(1327.22)	(1244.48)
MS15-192**	304SS		(6.35)	(2.77)	(1.78)	(5.81)	20,000	18,950	17,200	17,000
14045 000++	01000						(1378.93)	(1306.54)	(1185.88)	(1172.09)
MS15-093**	316SS	QS375	3/8	0.203	0.086	0.032	20,000 (1378.93)	20,000 ( <b>1378.93</b> )	19,250 ( <b>1327.22</b> )	18,050 <b>(1244.48)</b>
MS15-193**	304SS		(9.53)	(5.16)	(2.18)	(20.65)	20,000	20,000	19,250	18,050
							(1378.93)	(1378.93)	(1327.22)	(1244.48)
MS15-097	316SS	QS562	9/16	0.359	0.101	0.101	15,000	15,000	14,400	13,650
MS15-194	304SS		(14.29)	(9.12)	(2.57)	(65.16)	(1034.19)	(1034.19)	(992.82)	(941.12)
MS15-098	316SS	QS750	3/4 ( <b>19.05</b> )	0.516 (13.11)	0.117 <b>(2.97)</b>	0.209 <b>(134.84)</b>	15,000 <b>(1034.19)</b>	15,000 <b>(1034.19)</b>	14,400 <b>(992.82)</b>	13,650 <b>(941.12)</b>
MS15-099	316SS	QS1000	1 (25.4)	0.688 <b>(17.48)</b>	0.156 <b>(3.96)</b>	0.371 <b>(239.35)</b>	15,000 <b>(1034.16)</b>	15,000 <b>(1034.16)</b>	14,400 <b>(992.83)</b>	13,650 <b>(941.12)</b>

<sup>\*</sup>Maximum pressure rating is based on the lowest rating of any component.

Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change

For prompt service, Parker Autoclave Engineers stocks select products. Consult your local representative

<sup>\*\*</sup>Larger inside diameters are available as special order.

# Nipples- QS Series

# **Pressures to 15,000 psi (1034 bar)**


For rapid system make-up, Parker Autoclave Engineers supplies pre-assembled nipples in various sizes and lengths for Parker Autoclave QSS valves and fittings.

# **Special Lengths**

In addition to the standard lengths listed in the table below, nipples are available in any custom length. Consult factory.


#### **Materials**

Catalog numbers in table refer to Type 316 Stainless Steel.

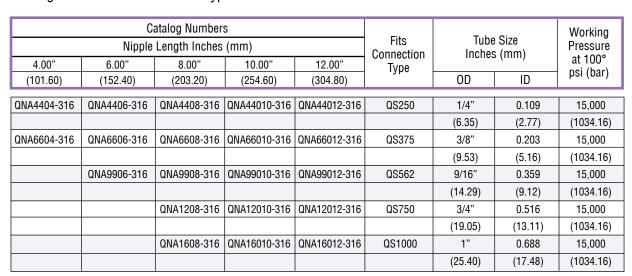


#### **Close Tube Port Connectors**

Model	Size Inches (mm)	Fits Connection Type	Dimension "L" Inches (mm)
QTS4403.25	1/4" (6.35)	QS250	3.25 (82.55)
QTS6603.50	3/8" (9.53)	QS375	3.50 (88.90)
QTS9905.25	9/16" (14.29)	QS562	5.25 (133.35)
QTS1206.375	3/4" (19.05)	QS750	6.38 (162.10)



#### **Elbow Tube**


Model	Size Inches (mm)	Fits Connection Type	Dimension "H" Inches (mm)	Mean Radius "R" Inches (mm)	Inside Radius Ri Inches (mm)
QTE44-90	1/4" (6.35)	QS250	3.25 (82.55)	0.563 (14.30)	0.438 (11.13)
QTE66-90	3/8" (9.53)	QS375	3.50 (88.90)	0.938 (23.83)	0.75 (19.05)
QTE99-90	9/16" (14.29)	QS562	7.50 (19.05)	2.906 (73.82)	2.625 (66.68)
QTE12-90	3/4" (19.05)	QS750	10.00 (254.00)	3.875 (98.43)	3.5 (88.9)
QTE16-90	1" (25.40)	QS1000	11.50 (292.10)	5.125 (13.30)	4.625 (117.48)

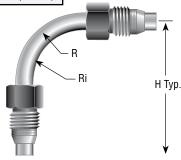

# Check Valvos - QS Series


# **Pressures to 15,000 psi (1034 bar)**

#### **O-Ring Check Valves**

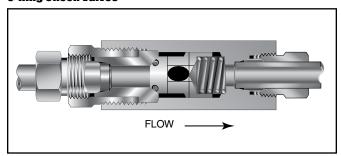

Minimum operating temperature for standard o-ring check valves 0°F (-17.8°C)

#### **Ball Check Valves**

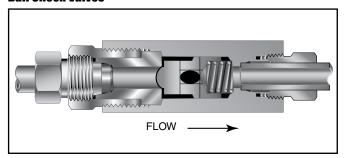

Minimum operating temperature for standard o-ring check valves 0°F (-17.8°C)

Provide unidirectional flow and tight shut-off for liquids and gases with high reliability. When differential drops below cracking pressure\*, valve shuts off. (Not for use as relief valve.)

**Materials:** 316 Stainless Steel: Body, cover, poppet, cover gland. 300 Stainless Steel: Spring. Except 1" - see note below. Standard O-ring: Viton, for operation to 400° F (204°C). Buna-N or PTFE available for 250°F (121°C) or 400°F (204°C) respectively; specify when ordering.

\*Cracking Pressure: 20 psi (1.38 bar) ±30%. Springs for higher cracking pressures (up to 100 psi (6.89bar)) available on special order for O-ring style check valves only.

Prevent reverse flow where leak-tight shut-off is not mandatory. When differential drops below cracking pressure, valve closes. With all-metal components, valve can be used up to 650°F (343°C). See Technical Information section for connection temperature limitations. (Not for use as a relief valve.)

**Ball and poppet are an integral design** to assure positive, in-line seating without "chatter". Poppet is designed essentially for axial flow with minimum pressure drop.

Materials: 316 Stainless Steel: Body, cover, cover gland, ball poppet. 300 Series Stainless Steel: Spring. Except 1" - see note below.

CAUTION: While testing has shown O-Rings to provide satisfactory service life, both cyclic and shelf life may vary widely with differing service conditions, properties of reactants, pressure and temperature cycling and age of the O-ring. FREQUENT INSPECTIONS SHOULD BE MADE to detect any deterioration, and O-rings replaced as required.

**CAUTION:** See Tubing section for proper selection of tubing.

Catalon	Fits	Pressure	Orifice	Rated	Dimensions - inches (mm)						
Number	Connection Type	Rating psi (bar)*	inches (mm)	C <sub>V</sub>	А	В	С	D Typical	Hex		

### **O-Ring Check Valves**

QS04400	QS250	15,000	0.188	0.15	3.18	2.56	0.44	0.63	0.81	
		(1034.20)	(4.78)		(80.77)	(65.02)	(11.18)	(16.00)	(20.57)	
QS06600	QS375	15,000	0.312	0.63	3.56	3.00	0.53	0.75	1.00	
		(1034.20)	(7.93)		(90.42)	(76.20)	(13.46)	(19.05)	(25.40)	
QS09900	QS562	15,000	0.359	2.30	5.21	4.50	0.81	1.19	1.75	See
		(1034.20)	(9.12)		(132.33)	(114.30)	(20.57)	(30.18)	(44.45)	Figure 1
QS012	QS750	15,000	0.516	4.70	6.40	5.50	1.03	1.50	1.88 <sup>†</sup>	i iguio i
		(1034.20)	(13.11)		(162.56)	(139.70)	(26.16)	(38.10)	(47.75)	
QS016	QSF1000	15,000	0.688	14.00	8.92	7.52	1.19	1.75	3.00	
		(1034.20)	(17.48)		(226.57)	(191.01)	(30.23)	(44.45)	(76.20)	

#### **Ball Check Valves**

QSB4400	QS250	15,000 <b>(1034,20)</b>	0.188 <b>(4.78)</b>	0.15	3.18 ( <b>80.77</b> )	2.56 ( <b>65.02</b> )	0.44 <b>(11.18)</b>	0.63 ( <b>16.00</b> )	0.81 ( <b>20.57</b> )	
QSB6600	QS375	15,000 ( <b>1034.20</b> )	0.312 ( <b>7.93</b> )	0.63	3.56 (90.42)	3.00 ( <b>76.20</b> )	0.53 (13.46)	0.75 (19.05)	1.00 (25.40)	
QSB9900	QS562	15,000 ( <b>1034.20</b> )	0.359 ( <b>9.12</b> )	2.30	5.21 ( <b>132.33</b> )	4.50 (114.30)	0.81 ( <b>20.57</b> )	1.19 ( <b>30.18</b> )	1.75 (44.45)	See Figure 1
QSB12	QS750	15,000 ( <b>1034.20</b> )	0.516 ( <b>13.11</b> )	4.70	6.40 ( <b>162.56</b> )	5.50 (139.70)	1.03 ( <b>26.16</b> )	1.50 ( <b>38.10</b> )	1.88 <sup>†</sup> (47.75)	i iguio i
QSB16	QS1000	15,000 ( <b>1034.20</b> )	0.688 (17.48)	14.00	8.92 ( <b>226.57</b> )	7.52 (191.01)	1.19 ( <b>30.23</b> )	1.75 <b>(44.45)</b>	3.00 ( <b>76.20</b> )	

#### †Distance across flats

Note:


All check valves are furnished complete with connection components unless otherwise specified.

\*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower

All dimensions for reference only and subject to change.

For prompt service, Parker Autoclave stocks select products. Consult your local representative

<sup>1&</sup>quot; check valve bodies, cover, cover gland and poppet is 2507 Super Duplex standard.

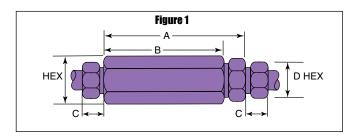

#### WARNING

#### FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

#### Offer of Sale

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

© 2013 Parker Hannifin Corporation | Autoclave Engineers is a registered trademark of the Parker Hannifin Corporation

02-1247BE

January2013





Instrumentation Products Division
Autoclave Engineers Operation
8325 Hessinger Drive
Erie, Pennsylvania 16509-4679 USA
PH: 814-860-5700 FAX: 814-860-5811
www.autoclave.com

Parker Hannifin Manufacturing Ltd.
Instrumentation Products Division, Europe
Industrial Estate Whitemill
Wexford, Republic of Ireland
PH: 353 53 914 1566
FAX: 353 53 914 1582

**Caution!** Do not mix or interchange parts or tubing with those of other manufacturers. Doing so is unsafe and will void warranty.

Caution! Parker Autoclave Engineers Valves, Fittings and Tools are not designed to work with common commercial instrument tubing and will only work with tubing built to Parker Autoclave Engineers AES Specifications. Failure to do so will void warranty.

ISO-9001 Certified